


VIVO 90 HYDRO 24 M1 Rev. 2020082601



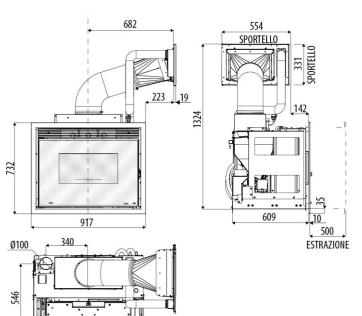


(Max) nominal heat output	24.7 kW
(Max) nominal heat output (H ₂ O)	19 kW
Minimum heat output	5.8 kW
Minimum heat output (H ₂ O)	3.8 kW
Efficiency at Max	93.3 %
Efficiency at Min	95.9 %
Energy Efficiency Class (A++ / G scale)	A++
Energy Efficiency Index (EEI)	132 %
Seasonal space heating energy efficiency (ηs)	90 %
Temperature of exhaust smoke at Max	127 °C
Temperature of exhaust smoke at Min	59 ℃
Particulate/OGC / Nox (nominal at 13%O2)	15 - 2 - 110 mg/Nm3
CO at 13% O ₂ at Min and at Max	0.022 - 0.012 %
CO ₂ at Min and at Max	6.4 - 11.9 %
Boiler liters content	201
Maximum operating pressure	2 bar - 100 kPa
Recommended draught at Max power	10 Pa
Minimum draught allowed for minimum power	2 Pa
Mass of smoke at Min and at Max	6.5 - 16.2 g/sec
Hopper capacity	641
Fuel dimensions	Ø 6mm L 3÷40mm
Hourly consumption at Min and at Max	1.241 - 5.454 kg/h *
Autonomy at Min and at Max	33.844 - 7.701 h *
Heatable volume m3	449 - 706 - 1235 **
Combustion air inlet	Ø 60 mm
Air inlet	80 cm2
Smoke outlet	Ø 100 mm
Nominal electrical power (EN 60335-1).	144 W (max 450 W)
Supply voltage and frequency	230 Volt / 50 Hz
Net weight	190 kg
Distance from combustible material (back/side/under)	250 mm / 100 mm / 500 m
Distance from combustible material (front/ceiling)	1030 mm / 1000 mm

^{*} Data that may vary depending on the type of pellets used.

^{**}Heatable volume based on the requested power per m3 (respectively 55-35-20 W/m3)

VIVO 90 HYDRO 24 M1 Rev. 2020082601

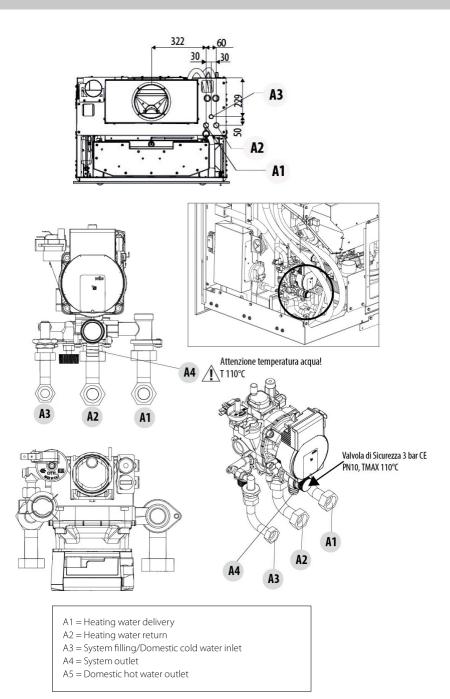





It is strongly recommended to wash the entire system before connecting it in order to get rid of residues and deposits. Always install shutters in the strongly recommended to wash the entire system before connecting it in order to get rid of residues and deposits. Always install shutters in the strongly recommended to wash the entire system before connecting it in order to get rid of residues and deposits. Always install shutters in the strongly recommended to wash the entire system before connecting it in order to get rid of residues and deposits. Always install shutters in the strongly recommended to wash the entire system before connecting it in order to get rid of residues and deposits. Always install shutters in the strongly recommended to tsystem leading to the stove so as to disconnect it from the hydraulic system should it be necessary to move it, or when it requires routine and/or special main tenance. Connect the stove using flexible pipes so that the stove is not excessively constrained to the system, and to allow slight movements.